



KAHUNA MASSAGE CHAIR®

BEST 3D ZERO GRAVITY MASSAGE CHAIR®

LM - 8800



HL-8800 TAMI

Thanks for choosing TAMI, please read the user's manual carefully before use and pay close attention to safety information in order to operate and use this product properly.

This manual provides safe and effective operation methods for user, please keep this manual properly upon reading for later consultation.

Contents	Safety Information	2
	Names and Functions of Parts	5
	Product Features and Effects	8
	Preparation before Use	9
	Functions and Options of Massage	11
	Product Maintenance and Storage	22
	Troubleshooting	23
	Specifications	25

Instructions on Important Safety Information

When this massage armchair is used, please pay close attention to and observe the following safety information:

Please carefully read all instructions before using this product:

DANGER – in order to reduce the risk of electric shock, please observe the following instruction:

1) Please unplug the power cord after using or before cleaning this massage armchair.

WARNING – in order to reduce risks of fire, burn, electric shock or injuring others, please observe the following instructions:

1) Be sure to unplug the armchair when it is left unattended. And it shall also be unplugged when it is laid aside or before mounting/removing parts.

2) Children, invalids and the disabled shall use this massage armchair under comprehensive guidance of others. Be sure to keep children away from the backrest and the legrest under adjustment.

3) Be sure to use this massage armchair for the purposes described in this manual. Please do not use parts and accessories not recommended by the manufacturer.

4) This massage armchair must not be used in following conditions: the power cord or plug is damaged, it works abnormally, and it is damaged or fall into water. Please return the massage armchair to the service centre for inspection and repair.

5) Please do not move this massage chair by pulling the power cord or use it as a handle.

6) Be sure to keep the power cord away from heating surfaces.

7) Please do not use this armchair when the air outlet is blocked. Please keep the air outlet unblocked and free from sundries such as cotton flocks and hairs etc.

8) Please do not drop or insert any object into any opening.

9) Please do not use this product outdoors.

10) Please do not use this product at places where aerosol product is used or oxygen is filled.

11) To power off, please switch off all controls before unplugging.

12) Please do not stand on or in the massage armchair. It can be use only by sitting on the cushion.

13) Children, the disabled or mentally handicapped person can use this massage armchair only under guidance and accompany of others.

14) Be sure to supervise children and ensure that they do not use the massage armchair as an amusement facility.

Please Keep This Instructions on Safety Information Properly
This massage chair is only for home use

Safety Information

Operating environment

- *Do not use TAMI in an excessively humid or dusty environment in order to prevent electric shock or malfunction.
- *Do not use TAMI in temperature above 40°C.
- *Do not place TAMI beside heater or stove or under direct sunlight.
- *Place and use TAMI on an even non-slip floor.
- *TAMI is designed for home use and do not use it for commercial purposes.



Caution

- *TAMI is restricted to indoor use.
- *If TAMI is used in lower room temperature, be sure not to raise the temperature abruptly. It suggests gradually raising the temperature to the normal range before using.
- *When TAMI is moved into a warmer place from a colder storage, the internal electronic parts always condensate moisture so as to influence normal operation of the machine or even cause malfunction. It suggests that this product is laid aside in normal room temperature for 1 hour before use.

Safety information on use

- *In order to use TAMI safely and properly, please be sure to read the User's Manual carefully before use.
- *Do not use TAMI without upholstery or cushion as it may cause injury or malfunction.
- *Do not use TAMI in combination with electric blanket or other therapeutic equipment as it may impair the effect of massage or cause injury.
- *Do not use TAMI an hour before and after taking food as it may have adverse effects on the user.
- *In order to prevent accidental injury, children or pets are not allowed to play around TAMI, especially in areas behind the backrest, under the footrest or under the seat.

- *Do not rest or place heavy objects on the armrest, foot rest or backrest in order to prevent accidental injury or malfunction.
- *Do not use TAMI when your body is wet.
- *Do not operate TAMI with wet hands.
- *Continuously massage one and the same area of body over five minutes may cause excessive stimulation and result in adverse effects.
- *Do not put your hand or foot into the motion path of the massage rollers during use as this may cause injury.
- *Stop using immediately when you feel uncomfortable during massage.
- *This product is not designed for self-diagnosis or treatment. Please consult doctors when diagnosis or treatment is needed.
- *Please consult doctor before use if you are under medication or medical services. Please do not use this product if you feel uncomfortable.
- *Please consult doctor before use if you are pregnant or menstruating.
- *Please do not use the massage armchair over 15 minutes each time.



Caution

- *Do not use TAMI after drinking.
- *Do not massage head, elbows, knees, breast or abdomen directly with the massage rollers.
- *Please unplug the power cord from socket immediately when liquid is splashed or poured on the massage armchair accidentally. Do not plug or unplug the power cord with wet hands.
- *Do not damage the power cord or operate TAMI with a broken power cord as it may cause electric shock or malfunction. Please contact the service center for detailed inspection.

Safety Information

Unsuitable conditions for using TAMI

- *In any of the following circumstances, please turn off the switch and cut off power immediately and contact the service centre.
- *Water is splashed on TAMI accidentally as it may cause electric shock.
- *The upholstery is torn and the internal components are exposed.
- *Please stop massaging immediately and consult doctor if abnormal or severe pain is felt during massage.
- *Please stop using immediately if malfunction of any component or any abnormal condition is perceived during use.
- *If power interruption is occurred during use, it shall pay attention to prevent sudden power restoration from injuring user.
- *There is thunder and lightening.


Assembly and Repair of TAMI

- *Do not attempt to dismantle or repair TAMI by yourself. Touching the internal components of TAMI may cause malfunction or get electric shock.
- *It is only the service center that can repair TAMI and users must not attempt to dismantle or repair by themselves.

Information on using plug and power cord for avoiding electric shock or malfunction



- *Please check whether the voltage indeed meets specifications of the product. TAMI can only be operated with alternating current (AC).**
- *Do not plug or unplug with wet hands.
- *Please unplug by holding the body of plug instead of pulling the power cord.
- *Do not place the power cord under TAMI or any other heavy objects.
- *Do not wind the power cord round TAMI as it may damage the power cord.
- *Do not use TAMI when the power cord is broken.
- *Do not use TAMI when the power socket is loose.
- *The power cord shall be replaced by the service center or professional technicians if it is damaged.

Names and Functions of Parts

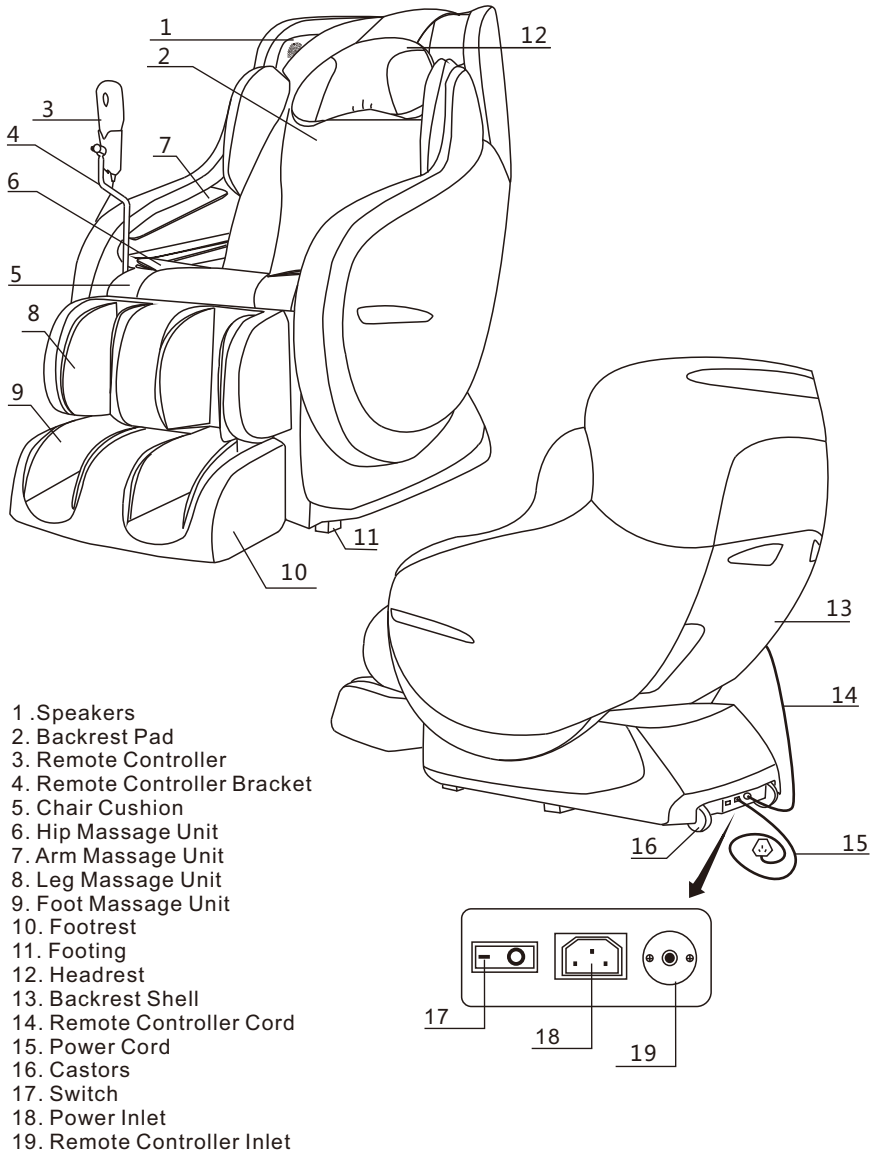

Names and Functions of Parts

Remote Controller

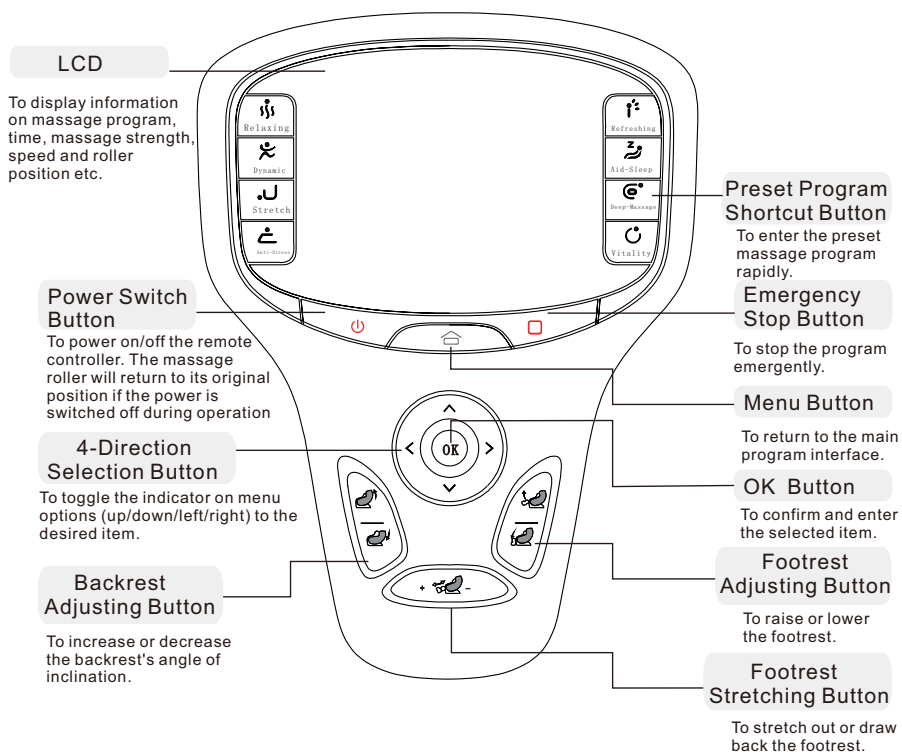

- *Do not sit or place heavy objects on the remote controller.
- *Avoid dropping the controller. Place the controller in the storage box when it is not used.
- *Do not excessively press the controller.
- *Do not operate the controller with wet hands.
- *Do not operate the controller with sharp or hard objects as it may cause malfunction.

Product Features and Effects

Product Features

- *All-in-one whole body massage, and there are 4-roller type 3D deep massage system, air pressure massage system and kneading plate.
- *8 kinds of automatic massage program (relaxing, dynamic, stretching, stress relieving, refreshing, sleep-aid, deep layer and vitality).
- *7 kinds of local massage program (head and neck, whole back, waist, upper body, lower body, whole body airbag and foot).
- *Shoulder massage unit provides easy and pleasant air pressure massage for should.
- *Massage body areas of palm, arms, spine and buttock with air pressure.
- *Massage your shanks, ankles and soles with strong wrapped rollers.
- *Shoulder position detection function let you enjoy more individualized massage.
- *Adjustable shoulder position.
- *Adjustable shoulder and back massage strength.
- *Massage speed can be adjusted when kneading and tapping options are selected.
- *Automatic timing of 5 minutes, 10 minutes and 15 minutes.
- *Stylish color LCD can display selected function item and progress of massage program.
- *Built in castor for easy movement.


Product Effects

- *Relieve fatigue.
- *Improve blood circulation.
- *Soothes tired muscles.
- *Relaxes stiff and aching muscles.
- *Relieve stress.
- *Promote relaxation.
- *Relieve tension and stress of lower back.

Preparation before Use


Set up TAMI

- * Turn the foot massage unit to front and put the cushion back on the chair plate.
- * Mount the remote controller bracket
- * Be sure to adjust the backrest to the upright position before use

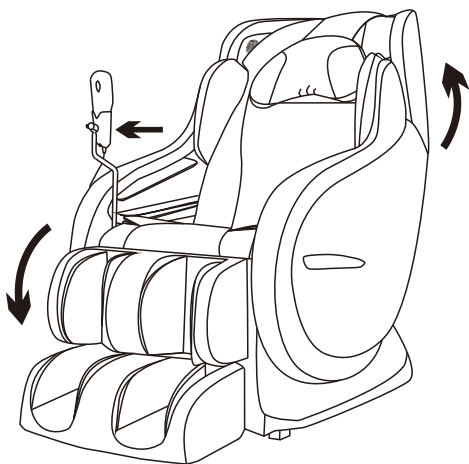


Place the headrest

- * As shown in the picture, neatly place the loose part of the headrest pad under the strap.

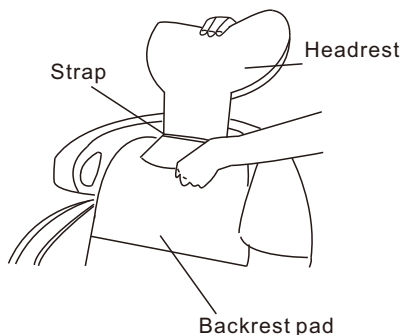

Place TAMI

- * In order to adjust the backrest and foot massage unit of TAMI safely during use, it shall ensure that there is space of more than 10cm behind TAMI and 80cm in front.
- * In order to avoid interference of signals, TAMI must be kept 1m away from A/V equipment such as TV and Radio etc.

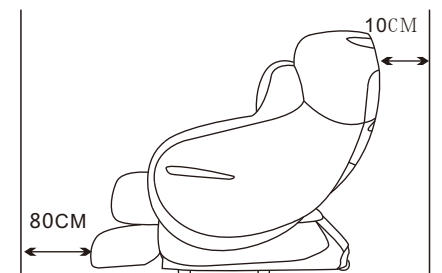

- * TAMI is very heavy, so be sure to place it with great care in order to prevent the surface of floor from damaging.
- * It suggests putting a carpet under TAMI in order to prevent it from scratching the floor and reduce noise during operation.


Caution

- * Do not place TAMI in bathrooms, saunas (steam chamber), or other sites with high temperature.
- * Be sure to use TAMI on even and horizontal ground.
- * Do not use TAMI in dirty or dusty sites or sites where the temperature is not below 40℃.
- * Be sure to keep TAMI away from direct sunshine or electric heater

Preparation before Use

Power on/off

- *Insert the power cord into the power jack.
- *Plug the power cord.
- *Turn on/off the main switch on the back of TAMI.

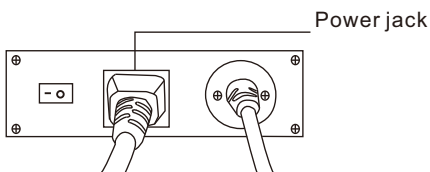

Caution

- *Make sure the power cord is not placed under TAMI.
- *Make sure that all switches (including the main switch) are turned off before plugging.

Inspect the backrest pad

- *Lift the backrest upholstery to ensure that there is no hole or tear on the backrest pad.

Caution

- *Often inspect to ensure there is no broken hole or crack. It shall immediately stop using TAMI, unplug it and contact the service center for thorough inspection once the backrest pad is found with cracks even minor ones.

Attention

- *If the rollers are located in the middle of the backrest when operation is stopped, they will return to the storage position when the main switch is turned on again.

Move TAMI

TAMI is fitted with castors for facilitating move.


- *The massage armchair can be moved in two ways.

The first way(1)

- *Raise the backrest to the fully upright state, turn the chair cushion upwards, and then turn the foot massage unit upwards as shown in the figure.

- *Turn off the main switch off and unplug the power cord.

- *As shown in the following figure, put up parts on both sides of the front of armchair and move the armchair to the desired position.

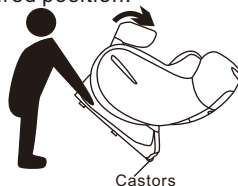

The second way(2)

- *Raise the backrest to the fully upright state, turn the chair cushion upwards, and then turn the foot massage unit upwards as shown in the figure.

- *Turn the main power switch off and unplug the power plug.

- *Move the massage armchair as per the following figure.





Caution

- *Do not move TAMI while someone is sitting in it. This will cause overturn of TAMI and result in accident or injury.
- *Be aware of falling of the foot massage unit while moving in order to avoid causing injury. It suggests that the foot massage unit is held by someone!



Preparation before Use

Select system language

* Select  **[Set]** on the main menu interface with direction buttons, press **[confirm]** to enter, select  **[language]** and then select the desired language.




Connect music player

*Select  **[Set]** on the main menu interface with direction buttons, press **[confirm]** to enter, select  **[Bluetooth]** and select **[start]**, and then it can play music after mobile equipment is adapted.




How to adjust the inclining angle of the backrest

Raise the backrest


*Press and hold the **[backrest arise]** button  until the backrest is lifted to the ideal angle.

Recline the backrest


*Press and hold the **[backrest recline]** button  until the backrest is reclined to the ideal angle.

Raise/recline the foot massage unit


To raise the footrest


*Press and hold the **[foot massage unit arise]**  button until the foot massage unit is lifted to the ideal height.

To recline the footrest

*Press and hold the **[foot massage unit recline]**  button until the foot massage unit is reclined to the ideal height.

Stretch out / draw back the foot massage unit


*Keep pressing **+** and **-** of **[foot massage unit]** button  to adjust to the desired length.



- *Please do not sit in the massage armchair while the foot massage unit is rising. Applying weight on the foot massage unit instantaneously may damage machine components or even turn over the armchair and result in accident or injury.
- *Ensure that the backrest has reached to the upright position before sitting in the armchair, and then adjust the angle of inclination according to personal preference.
- *Do not put fingers or sundries into the gap between the seat and the backrest/foot massage unit.
- *Please ensure that there is no obstruction behind the backrest or under the foot massage unit when the angle is adjusted.
- *The stretching function of foot massage unit works only when the massage bracket is raised.


Functions and Options of Massage


TAMI has three message types:
Whole body automatic message
Local automatic message
Manual adjustment

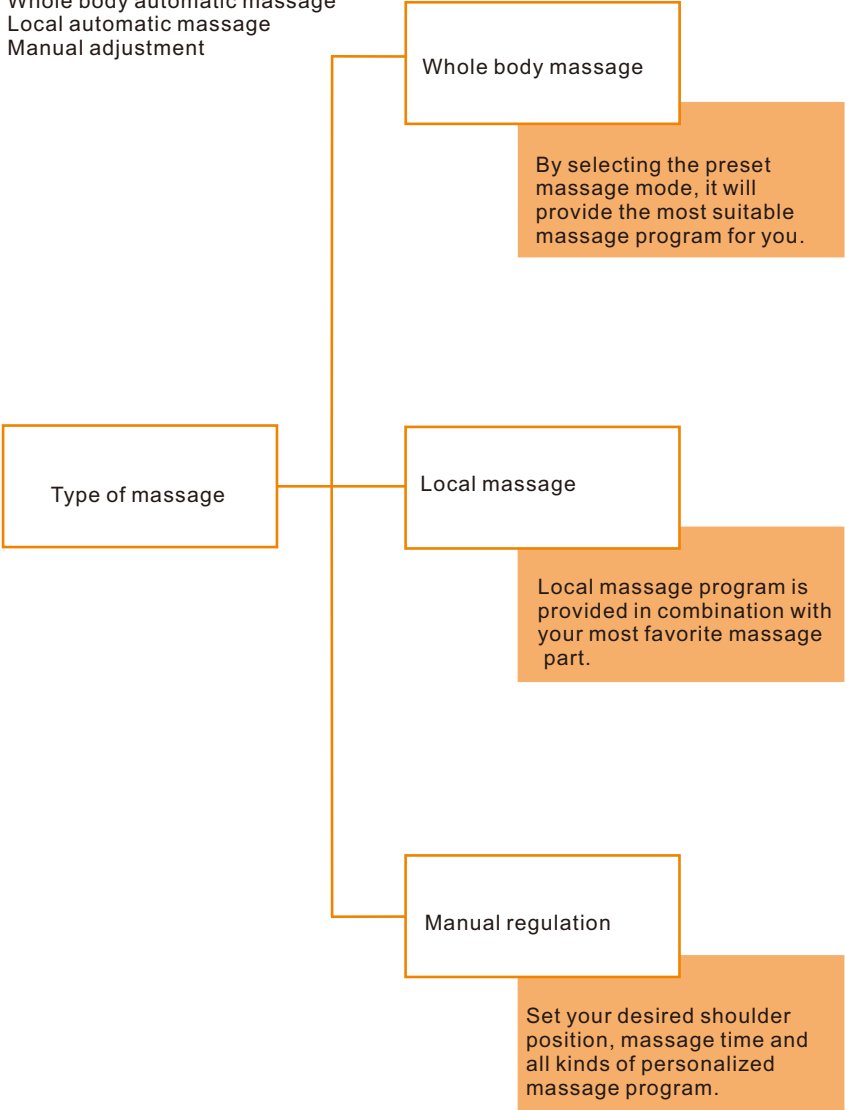


MASSAGE PROGRAMS AND SELECTIONS

Setting

1. Press the switch button  to turn on the remote controller..
2. Enter the main menu interface. The darker color of the **【Set】** icon refers to this option is selected. Press **[OK]** to enter the program menu.

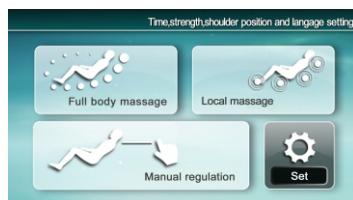

3. Press **[left]** and **[right]** to enter the **【Time】** option. Press **[up]** and **[down]** to select one of 5/10/15-minute, and then press **[OK]** to confirm..

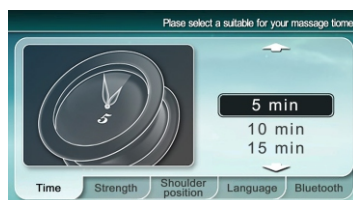


4. Press **[left]** and **[right]** to enter the **【Strength】** option. Adjustable items are as the following:
Movement-shoulder -----Weak/Strong
Movement-waist-----Weak/Strong
Shoulder airbag-----Strong/Weak
Arm airbag-----Strong/Weak
Hip airbag-----Strong/Weak
Leg airbag-----Strong/Weak
Press **[up]** and **[down]** to select the item to be adjusted, press **[OK]** button to enter submenu, press **[up]** and **[down]** to select the desired strength and press **[OK]** to confirm such option.



Functions and Options of Massage

Setting


5. Press [left] and [right] to enter the 【Shoulder position】 option, and then press [up] and [down] to adjust the shoulder position that you feel best.

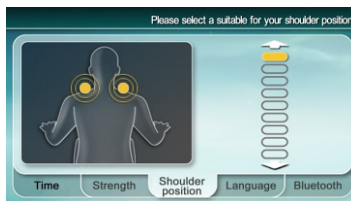

6. Press [left] and [right] to enter 【Language】 and then press [up] and [down] to select the language and press [OK] to confirm.




7. Press [left] and [right] to enter 【Bluetooth】 ,press [up] and [down] to select on/off and press [OK] to confirm.

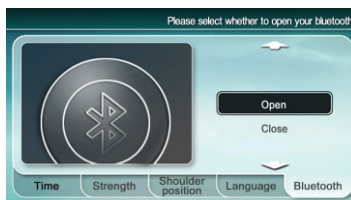

Functions and Options of Massage


Full body massage

Menu		
Relaxing		Get rid of annoyance and enjoy the relaxation.
Dynamic		Alleviate fatigue and bring vitality.
Stretch		Stretch the body and set free the spirit.
Anti-Stress		Relieve the pressure and maintain the health.
Refreshing		Refresh oneself and concentrate your mind.
Aid-Sleep		Nourishing heart and protect sleep.
Deep-Massage		Fine massage and in-depth experience.
Vitality		Relieve nerve and restore vitality.

- 1. Press power switch buttonto turn on the remote controller..
- 2.Enter the main menu interface. The darker color of the 【 Full body massage 】 icon refers to this option is selected. Press [OK] to enter the program menu.




- 3. Press direction buttons to select the required program, and then press [OK] to start such program.

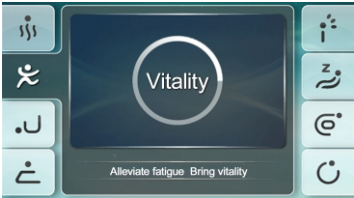


Functions and Options of Massage

Full body massage

4. The program will automatically detect shoulder position and enter the massage program. If the program cannot detect the shoulder position, press [OK] to manually adjust to shoulder position and press [OK] to initiate the program.

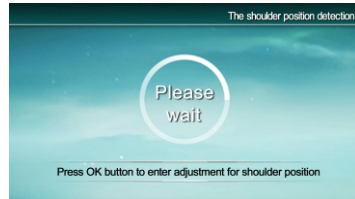

5. Press [left] and [right] to enter the 【Strength】 option. Press [up] and [down] to adjust the degree of massage strength.

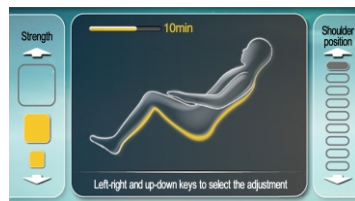

6. Press [left] and [right] to enter the 【Shoulder position】 option. Press [up] and [down] to adjust your most favorable shoulder position.




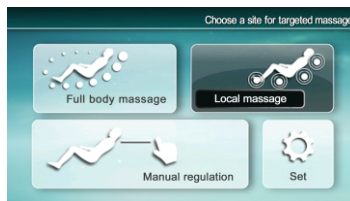
7. You can also enter corresponding programs rapidly with the shortcut buttons on the remote.




Functions and Options of Massage

Local massage

1. Press power switch button  to turn on the remote controller.
2. Enter the main menu interface. The darker color of the **【Local massage】** icon refers to this option is selected. Press [OK] to enter the program menu.




3. Press [up] and [down] to select the required program, and then press [OK] to start such program.

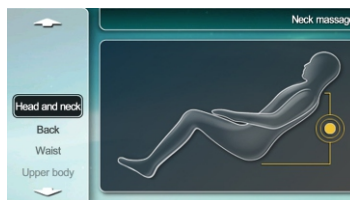


4. There are 7 massage programs for selection:

Head and neck/Back/Waist/Upper body/
Lower body/Full airbag/Foot.

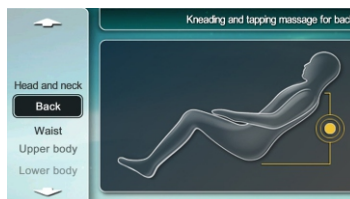


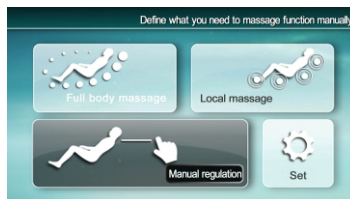
5. The program will automatically detect shoulder position and enter the massage program. If the program cannot detect the shoulder position, press [OK] to manually adjust to shoulder position and press [OK] to initiate the program.

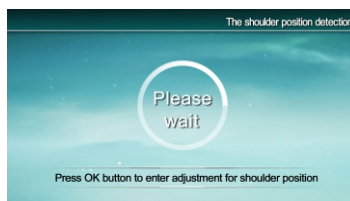


Functions and Options of Massage

Manual regulation


1. Press power switch button  to turn on the remote controller.
- 2: Enter the main menu interface. The darker color of the **【Manual regulation】** icon refers to this option is selected. Press [OK] to enter the program menu.




3. The program will automatically detect shoulder position and enter the massage program. If the program cannot detect the shoulder position, press [OK] to manually adjust to shoulder position and press [OK] to initiate the program.

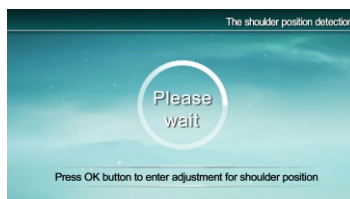

4. Press [left] and [right] to enter the **【Shoulder position】** option. Press [up] and [down] to adjust your most favorable shoulder position.

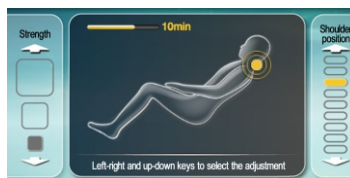


5. Press [left] and [right] to enter the **【Strength】** option. Press [OK] to enter program menu.

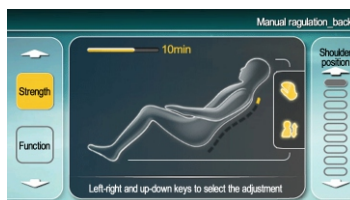

Functions and Options of Massage

Manual regulation


6. Press [left] and [right] to enter the **【Time】** option. Press [up] and [down] to select one of 5/10/15-minute, and then press [OK] to confirm.

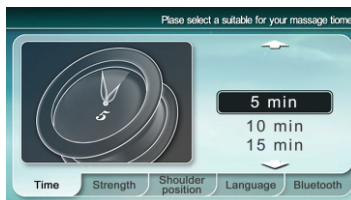

7. Press [left] and [right] to enter the **【Strength】** option.
Adjustable items are as the following:
Movement-shoulder -----Weak/Strong
Movement-waist-----Weak/Strong
Shoulder airbag-----Strong/Weak
Arm airbag-----Strong/Weak
Hip airbag-----Strong/Weak
Leg airbag-----Strong/Weak
Press [left] and [right] to select the item to be adjusted, press [OK] button to enter submenu, press [up] and [down] to select the desired strength and press [OK] to confirm such option.



8. Press [left] and [right] to enter the **【Shoulder position】** option, and then press [up] and [down] to adjust the shoulder position that you feel best.

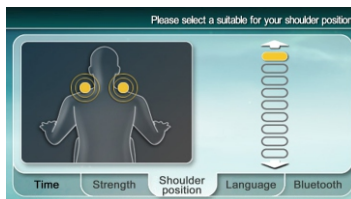


9. Press [left] and [right] to enter **【Language】** and then press [up] and [down] to select the language and press [OK] to confirm.




Functions and Options of Massage

Manual regulation

10. Press [left] and [right] to enter **【Bluetooth】**, press [up] and [down] to select on/off and press [OK] to confirm.

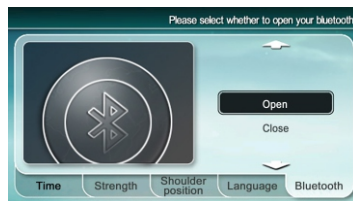

11. Press [up] and [down] to enter the **【Function】** option. Press [OK] to enter the program menu.

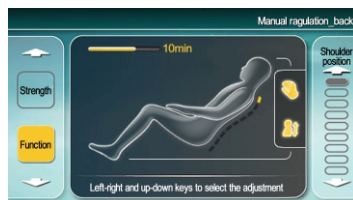


12.: Press [left] and [right] to enter the **【Back】** option.

The adjustable items are as the following:

Message manipulation-----Knead/Beat/
Knead and beat/Stop
Kneading direction-----Clockwise/Anticlockwise
Kneading speed-----Fast/Slow/Automatic
Beat speed-----Fast/Slow/Automatic
Mobile speed-----Fast/Slow/Automatic
Massage width-----Wide/Middle/Narrow
Massage range-----Back/Shoulder/
Middle part/Waist/Stop

Press [up] and [down] buttons to select the item to be adjusted, press [OK] to enter submenu, press [up] and [down] buttons to select the required option and press [OK] to confirm.

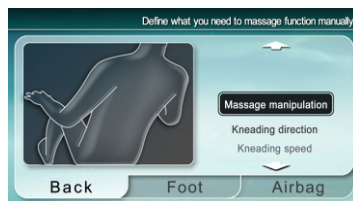

Functions and Options of Massage

Manual regulation


13. Press [left] and [right] buttons to enter the **【Foot】** option.

Adjustable items are:

Foot wheel-----Clockwise/Anticlockwise/
Automatic/Stop

Foot airbag-----Open/Close

Press [up] and [down] buttons to select the item need to be adjusted, press [OK] to enter submenu, press [up] and [down] buttons to select the required item, and then press [OK] to confirm.

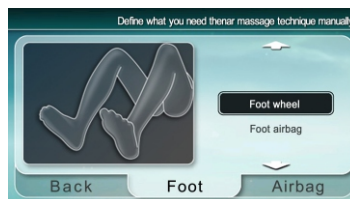

14. Press [left] and [right] buttons to enter the **【Airbag】** option.


Adjustable items are:

Shoulder-----Open/Close

Arm-----Open/Close


Hip-----Open/Close

Press [up] and [down] buttons to select the item need to be adjusted, press [OK] to enter submenu, press [up] and [down] buttons to select the required item, and then press [OK] to confirm.

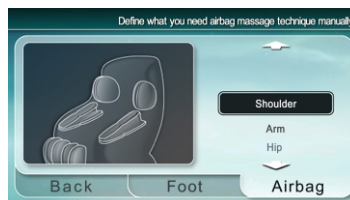



Functions and Options of Massage

Stop massaging

*Pressing[] button, it will immediately stop all massage functions, and then the roller will return to the initial position, all airbags will be deflated and the massage will be stopped.

Caution

*In case of malfunction or emergency, press[] button to immediately stop massaging program.And then, press[] button to make the roller return to the initial position and turn off the main power switch.

After use

*Return the backrest to the upright position and lower the footrest completely after use.



Caution


*In order to prevent malfunction or accident, please immediately turn off the main power switch and unplug the power cord after using TAMI.

*Be sure to unplug the power cord if TAMI will be laid aside for a long period of time.

Product Storage and Maintenance

Storing TAMI


- *Wipe off dust and dirt on TAMI each time after use.
- *Keep TAMI clean and away from places of high humidity.
- *If TAMI will be laid aside for a long period of time, cover TAMI with a dust cover and unplug its power cord.



- *Do not store TAMI in places under direct sunlight or with high temperature in order to prevent the color of upholstery from fading.
- *Do not make TAMI contact with wallpaper or vinyl materials for a long time in order to avoid discoloration.

Cleaning TAMI


- *Please ensure that the main power switch is powered off and the power cord is unplugged before cleaning.
- *TAMI can be cleaned with clean soft dry cloth.
- *Do not wash the upholstery with domestic washer in order to avoid deterioration.



- *Do not clean TAMI with corrosive detergents such as benzene or thinner in order to avoid the color of upholstery from fading.
- *Do not ironing the upholstery of TAMI.

Cleaning the remote controller

- *Clean the remote controller only with dry cloth.



- *Do not clean the remote controller with wet cloth in any condition in order to prevent malfunction.


Troubleshooting

If you meet trouble while using TAMI, please consult the following prompts and possible solutions. If TAMI is still in the fault state or cannot be used, please turn off the power and unplug and contract the service center.

Users must not dismantle or repair TAMI by themselves. Damage of product as a result of self dismantle or repair will lead to invalidation of product warranty and the service center has no responsibility for any consequence caused thereof.

Condition	Possible causes/solution
*TAMI cannot be started.	<ul style="list-style-type: none">*Please confirm the main power switch and the power plug switch is turned on.*Please confirm the power cord is indeed plugged.*Please check whether the output voltage of socket is proper.
*The footrest massage unit cannot be stretched out.	<ul style="list-style-type: none">*For the sake of safety, the footrest massage unit can be stretched out only when it is raised to certain angle.*Raise the footrest massage unit.
*The backrest and footrest cannot be raised/declined.	<ul style="list-style-type: none">*Ensure that there is object behind the backrest or under the footrest massage unit in order to prevent the anti-pressing function from being activated.
*Automatic position detection fails.	<ul style="list-style-type: none">*Keep your body sitting in the deepest position of the armchair and keep your head on the headrest pad during automatic detection.
*The air massage stops when the chair is declining.	<ul style="list-style-type: none">*For the sake of safety, the air pressure massage will be stopped when the angle of backrest is adjusted, so this condition is not a fault.

Troubleshooting

Condition	Possible causes/solution
<ul style="list-style-type: none"> *The rollers and the backrest pad make frictional sound. *Motor sound is clearly hearable during operation. *Loud sound is given when tapping and kneading massage is performed. 	<ul style="list-style-type: none"> *This is the sound produced by mechanical structure instead of failure of internal components. *This may occur during normal operation.
<ul style="list-style-type: none"> *Massage is suddenly stopped and the massage rollers return to their original position. 	<ul style="list-style-type: none"> *The preset auto-timing has been reached. *In order to avoid the massage armchair from causing accident due to overheat, TAMI is equipped with overheat reboot protection equipment. *If TAMI stops and fails to restart as a result of overheat, turn off the main power switch for at least 30 minutes in order to prevent TAMI from suddenly starting after components are cooled down. *The  button was pressed accidentally.
<ul style="list-style-type: none"> *The remote controller does not work. 	<ul style="list-style-type: none"> *Check the power plug and ensure that it is indeed plugged into the socket. *Check whether the lines on the back of TAMI are properly connected. *Confirm the main power switch is turned on.
<ul style="list-style-type: none"> *The power cord and plug are excessively hot. 	<ul style="list-style-type: none"> * Stop using immediately and contact the servicecentre.
<ul style="list-style-type: none"> *The massage stops in the process. 	<ul style="list-style-type: none"> * Turn off the main switch on the back of the armchair and turn on 5 seconds later. If the same problem is occurred again, please turn off the main switch, unplug the power cord and contact the service centre.

Specifications

Product name/model	HL-8800 TAMI
Rated voltage	AC220-AC240V 50/60HZ AC110v 50/60HZ
Power consumption	Approx. 120w
Time ratio	20 min
Auto-timing	Approx. 15min
Reclining angle	Approx. 115 to 155 degrees
Backrest massage unit	
Kneading speed	Approx. 35 rpm (low)/approx.43rpm (high)
Kneading width	5 to 12 cm
Tapping speed	Approx. 460 rpm (low)/approx.520 rpm (high)
Tapping width	The upper roller is approx. 5/10.5cm The lower roller is approx. 8/11cm
Roller speed	High 40mm/s, low 30mm/s
Rolling range	The whole range is 600mm
Air cushion massage	
Air pressure	Upper limit 30KPA
Foot massage unit	
Roller speed	Approx. 40 rpm


Specifications

Dimension

Backrest upright	Approx. 77(W) * 143(L) * 119(H)cm
Backrest reclined	Approx. 77(W) * 176(L) * 91(H)cm

Weight

Net weight	Approx. 95kg
Gross weight	Approx. 115kg

	<p>Correct disposal of this product</p> <p>This symbol indicates that this product shall not be discarded with domestic wastes in any EU country. In order to prevent random discarding from causing harm to environment and human body, it shall indeed increase the reproducibility of residual available materials by recycling. To return the used articles, please follow the procedure for returning and recycling or contact with the original dealer since they can recycle the product without harming the environment.</p>
---	---

Records

Records



KAHUNA MASSAGE CHAIR®

BEST 3D ZERO GRAVITY MASSAGE CHAIR™

